


WARNING

Safety precautions:


- Always be sure of your target and beyond.
- Misuse or careless handling of this product can cause serious injury or even death.
- This is not a toy. It is a high power .175 gpe crossbow capable of shooting projectiles over 200 yards. It is intended for use by persons 18 years of age or older.
- Only shoot with proper bolts that have a minimum grain weight of 400 grains.
- Discontinue use if the crossbow becomes damaged.
- It is highly recommended to use eye protection while using this product.
- Keep your fingers clear of the travel path of strings and or cables.

CAUTION:


- Please read and follow all instructions carefully.
- It is recommended that a Qualified Archery Pro Shop set up the crossbow.
- The crossbow should be used in accordance with all applicable laws.
- It is recommended to lube the rail every 10 to 15 shots.
- Replace strings and or cables every year, or at the first sign of wear or fraying.

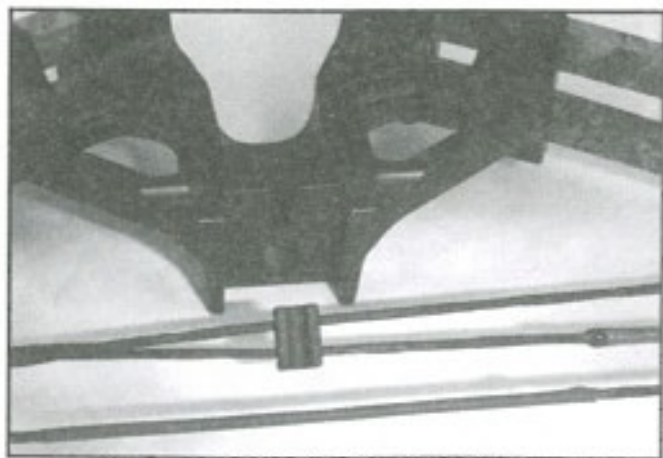

1. Be sure the cable slide is properly attached to the cables.
The gap on the lower side is larger than the upper side.

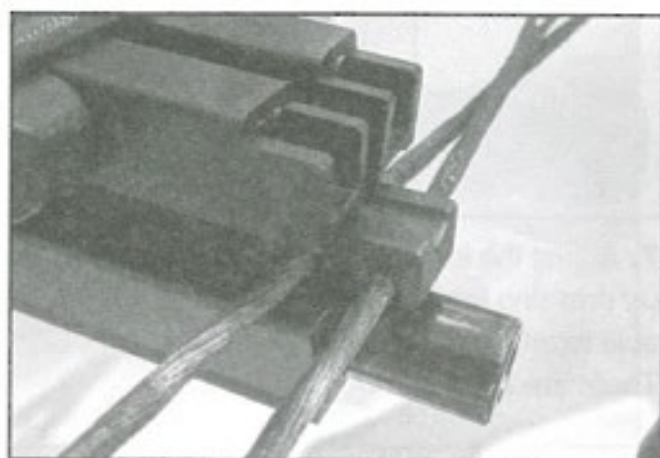


2. Slide the cable slide into the crossbow riser.

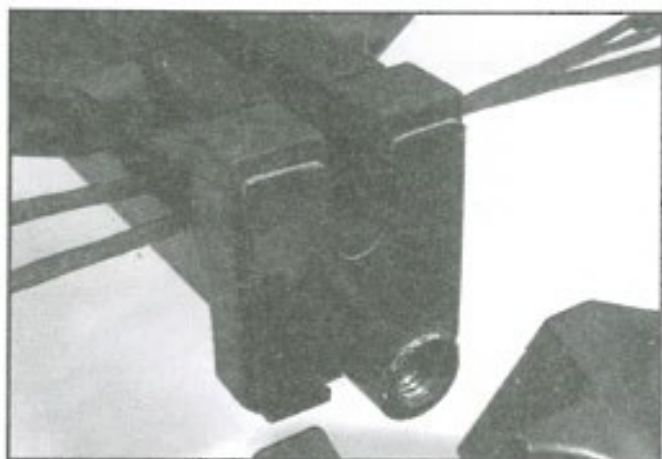

3. Insert the joint cap onto the crossbow barrel.




4. Slide the barrel onto the riser.

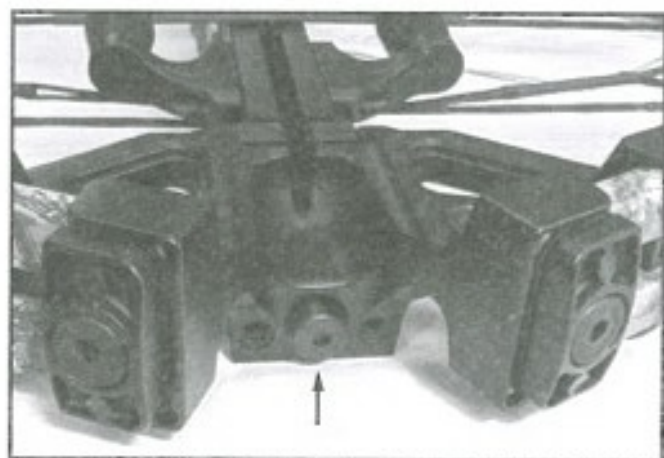

5. Install and tighten the Riser bolt firmly.




6. Attach the stirrup onto the riser by using 3 screws (2 long and 1 short screw).

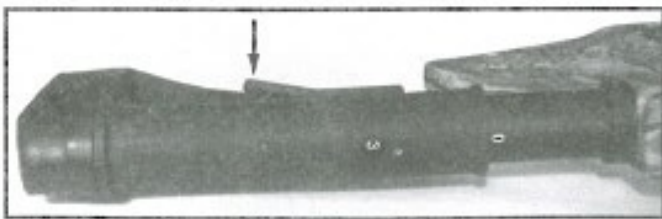


7. Adjust the length of the stock


By pressing the bottom of the stock, you are able to adjust the length of the stock. There are 0 ~ 5 numbers on the stock.

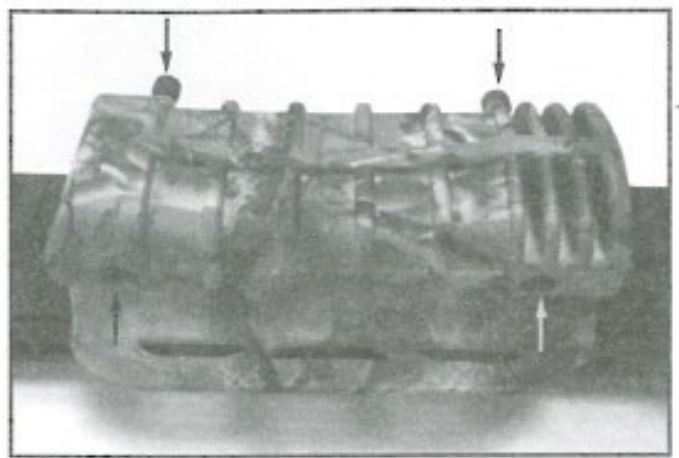

8. Adjust the grip under the crossbow barrel.
a: Loose out the 2 screws on the grip.

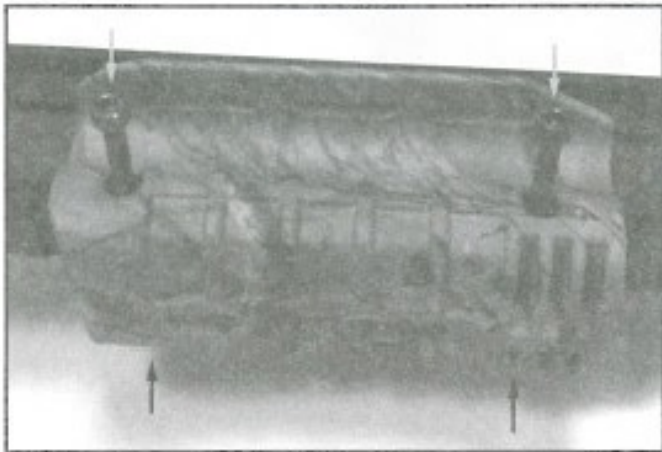


b: Adjust the grip to the area you wish and tighten the 2 screws.

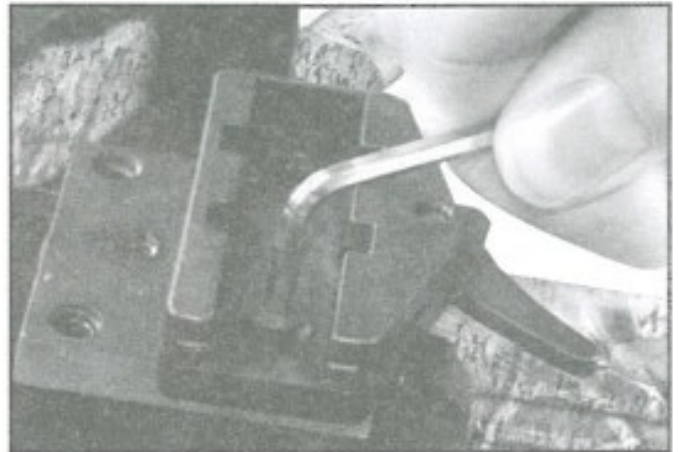

9. Screw the quick detach fitting to the quiver with Phillips head screwdriver.



10. Slide the quiver onto the bracket, pushing it all the way to the top.

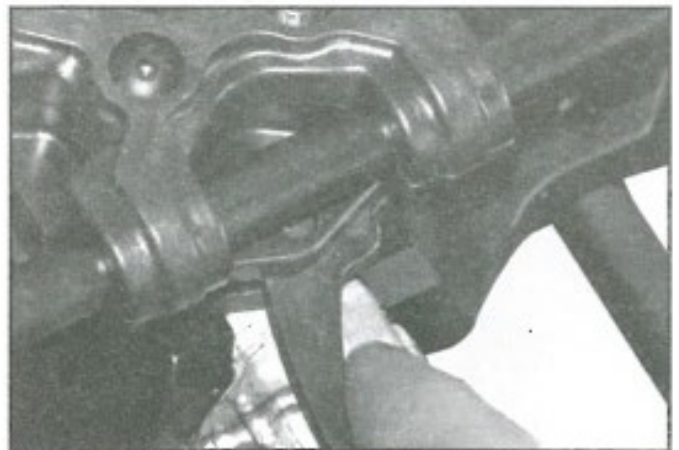


11. Close the latch as shown.
This will lock the quiver to the bracket.




12. Attach the sling stud to the front of the crossbow as shown. The sling stud is located within the sling packet.

May require pliers to fully tighten.

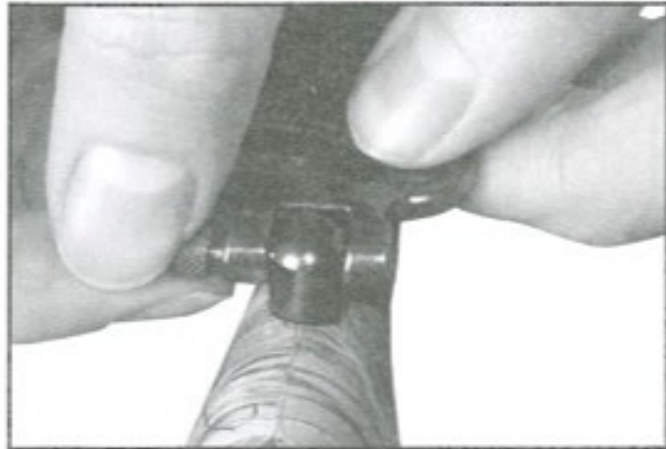

13. To attach the padded shoulder sling to the crossbow, loosen the thumb screw on the sling swivel. Locate it on the sling stud and retighten the thumb screw.

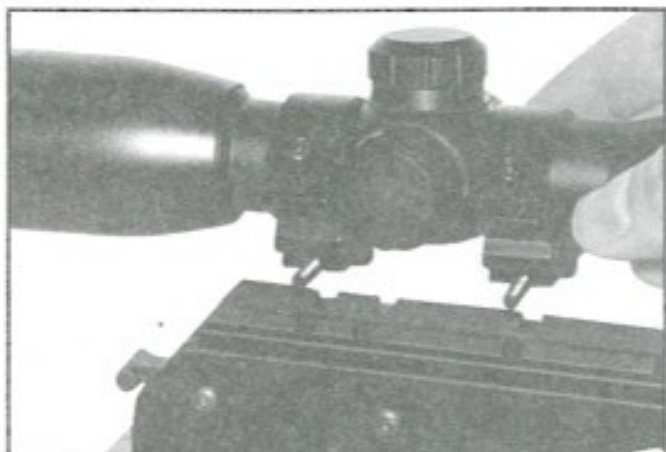


14. Align the scope mount with the slots on the weaver style sight base.




15. Slide in each of mounting brackets in the desired position on the weaver style sight base.




16. Tighten the locking nuts by hand or Allen key or screw driver if needed.

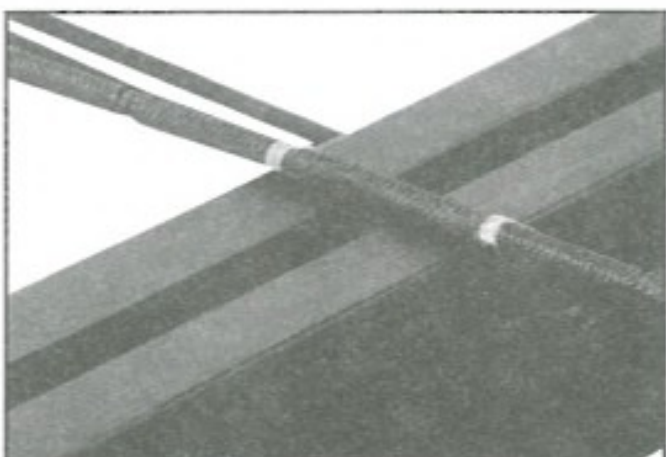

17. Mark your string to ensure that you are cocking the bow in a consistent manner. Due to the high draw weight involved in cocking the bow, it is easy to cock the crossbow off center. Failure to cock the crossbow squarely will result in poor accuracy. Simply mark the string with a marker or other means visibly ensure the bow is being cocked properly.

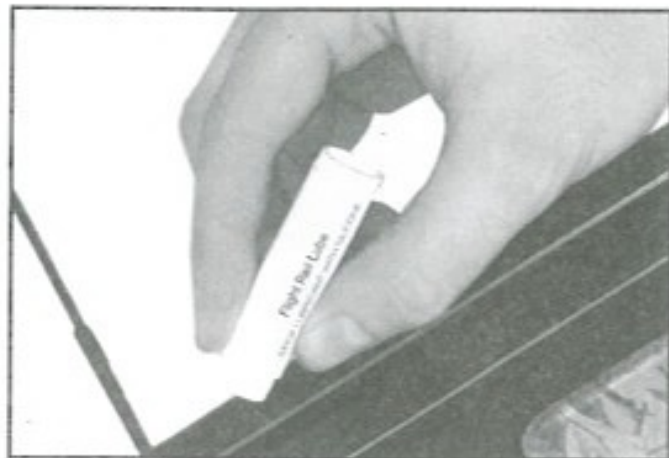

18. Before using, lubricate the string serving and rail. Failure to do so will result in the string serving burning and wearing out prematurely. We recommend apply the wax every 10 to 15 shots.

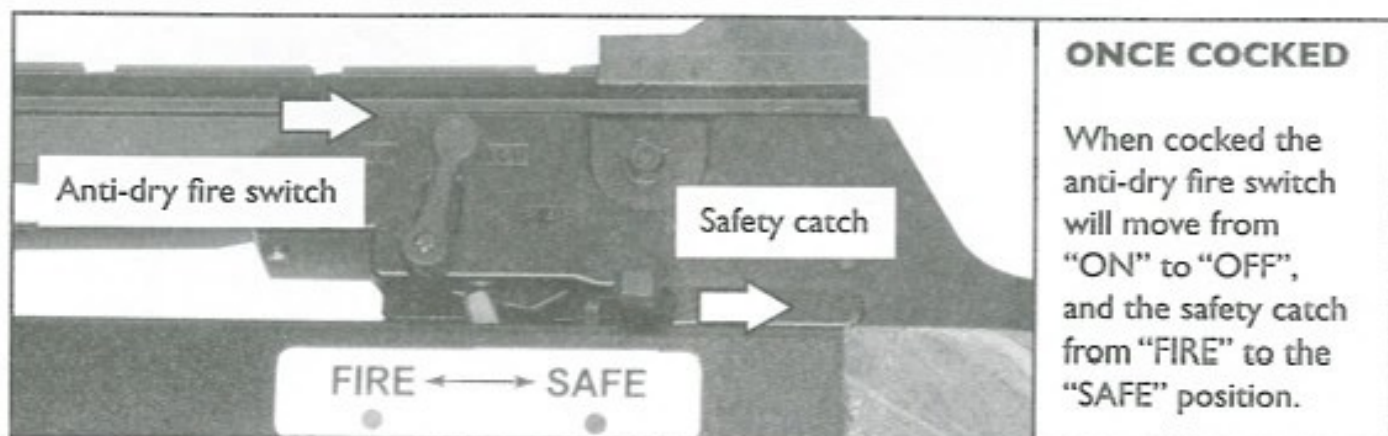

19. UNDERSTANDING THE ANTI DRY FIRE TRIGGER


The anti-dry fire switch will always be in the "ON" position when not cocked.

Once cocked, two actions will occur simultaneously: the anti-dry fire switch will move from "ON" to "OFF" and the safety catch will move from "FIRE" to "SAFE" automatically.


There are two ways to uncock your crossbow successfully: 1) Loading the crossbow with a bolt and shooting into an appropriate discharge target. This action will disengage the

anti-dry safety mechanism which will allow you to move the safety catch from "SAFE" to "FIRE".


2) To uncock the crossbow without the need of loading a bolt; move the anti-dry fire switch from "OFF" to the "ON" position with index finger, hold, and then move the safety catch with your thumb from "SAFE" to "FIRE". You cannot move safety catch unless the anti-dry fire switch is moved first and held for safety catch. Pull back on the string firmly enough to alleviate tension. Pull the trigger while maintaining pulling pressure on the string and gently let down to the resting position.

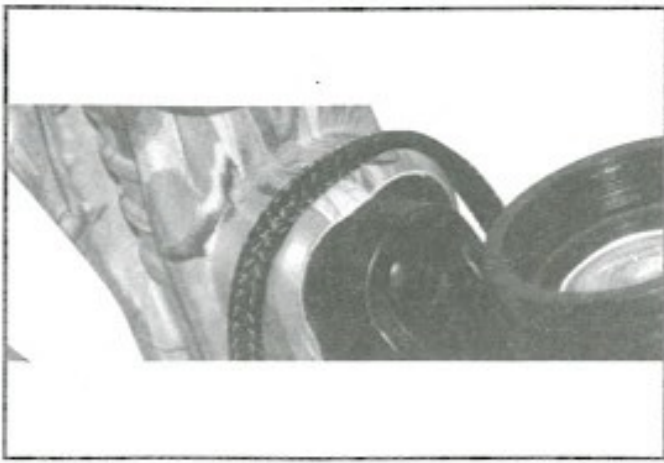


20. Before cocking, make sure the safety catch must be in the "Fire" position. Drape the middle of the rope over the groove in the stock located behind the trigger mechanism/scope.

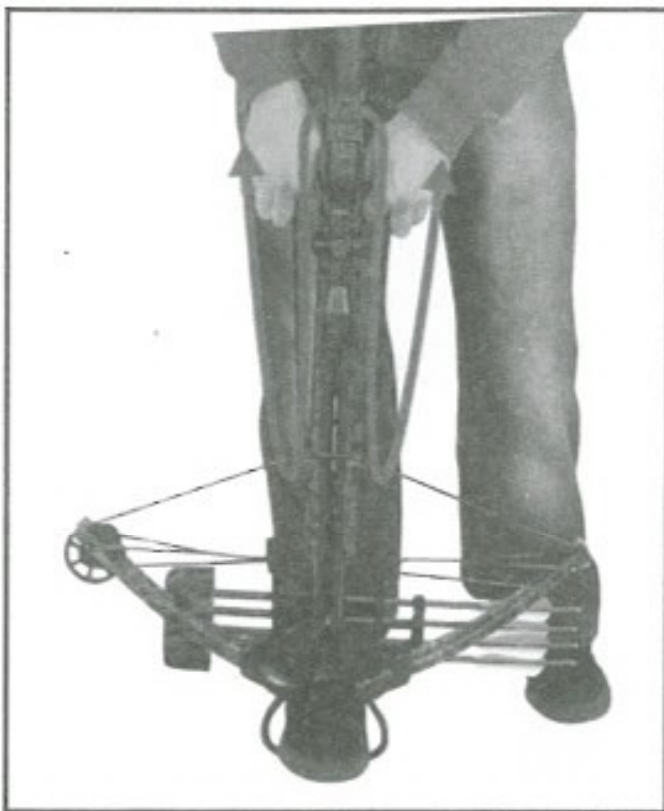

22. Place your foot into the stirrup. Pull both T-handles simultaneously, smoothly drawing the crossbow string back under the crossbolt retention spring and into the string opening in the trigger mechanism. (tension will keep cocking hooks against barrel if done properly). Continue drawing fully to the rear until the trigger safety moves to the " Safe " position. Relax the tension slightly to ensure the trigger latch has fully captured the crossbow string. The crossbow is now fully cocked, ready for loading. Remove the rope cocker before shooting.

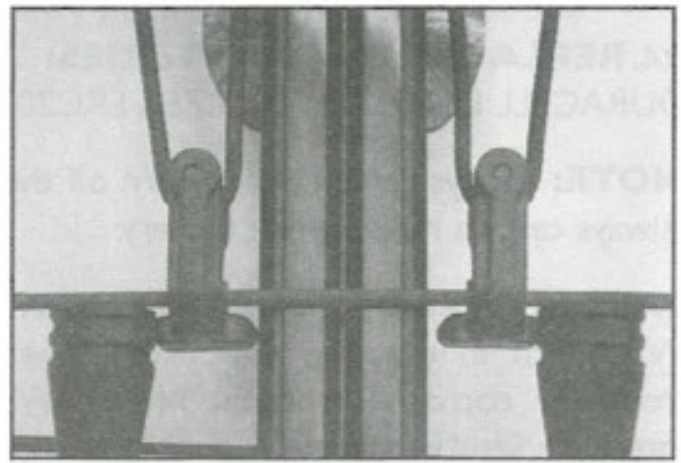

21. Place the hooks onto the crossbow string on each side of the flight track/rail.

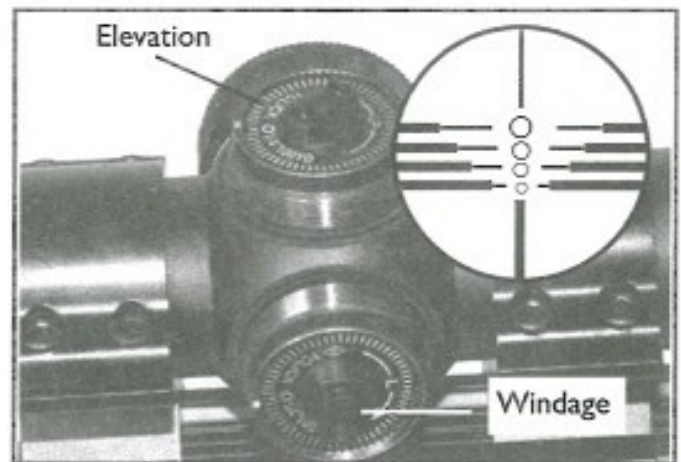

23. We suggest beginning to sight in your crossbow at no more than 10 yards to ensure that you are able to hit the target easily and to avoid loss or damage of your bolts. You will be sighting in the TOP CIRCLE on your scope for the shortest distance. The other circles below the top one will offer you additional yardage sight points, the lower the circle the further the distance. These distances will depend on your initial yardage sighting of the top circle, and also depend on your bolt (bolt shaft length, size and weight of tip).

Windage adjustment knob:
 Arrow striking right, adjust windage wheel CLOCKWISE
 Arrow striking left, adjust windage wheel COUNTER-CLOCKWISE.

Elevation adjustment knob:
 Arrow striking high, adjust elevation wheel CLOCKWISE.
 Arrow striking low, adjust elevation wheel COUNTER-CLOCKWISE.

24. REPLACEMENT BATTERIES:
DURACELL DL2032, ENERGIZER ERC2032, ETC.



NOTE: Always remember to turn off the scope when you have finished using it. Always carry a replacement battery.

TAKING CARE OF YOUR 4x32 MULTI-RETICLE ILLUMINATED SCOPE

When not in use, the sight should be kept in a clean and dry place away from any corrosive material. Never try to take the scope apart or clean it internally. Send your scope to a qualified service station if it ever needs repair. The lens surface may be cleaned with a lens cloth.

- A:** Objective End **B:** Windage Adjustment* **C:** Elevation Adjustment*
D: Battery Compartment Cap **E:** 7- Position Rheostart Knob
F: Eyepiece **G:** Locking Nuts

* Remove the dust caps to adjust the scope

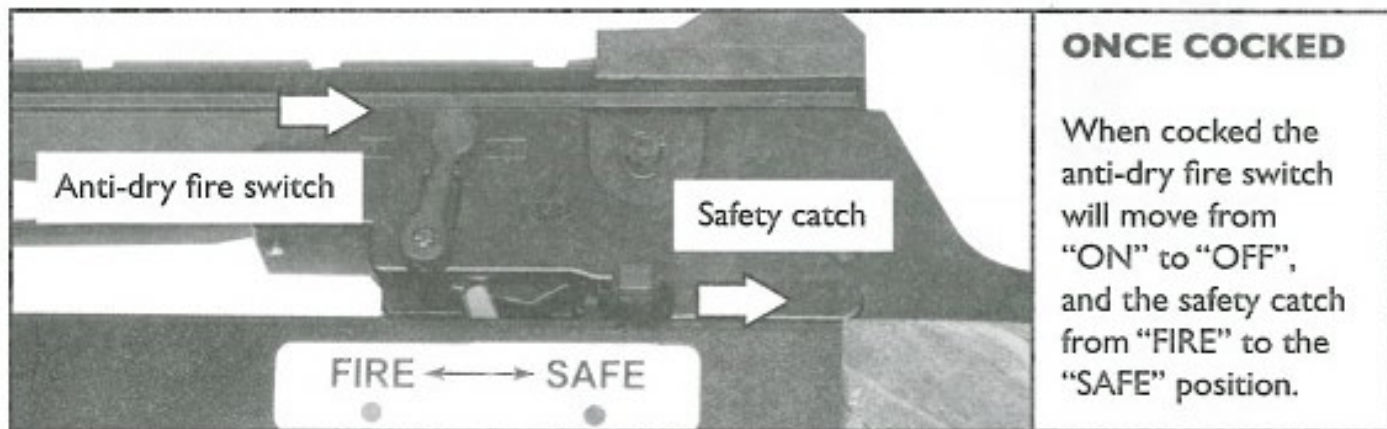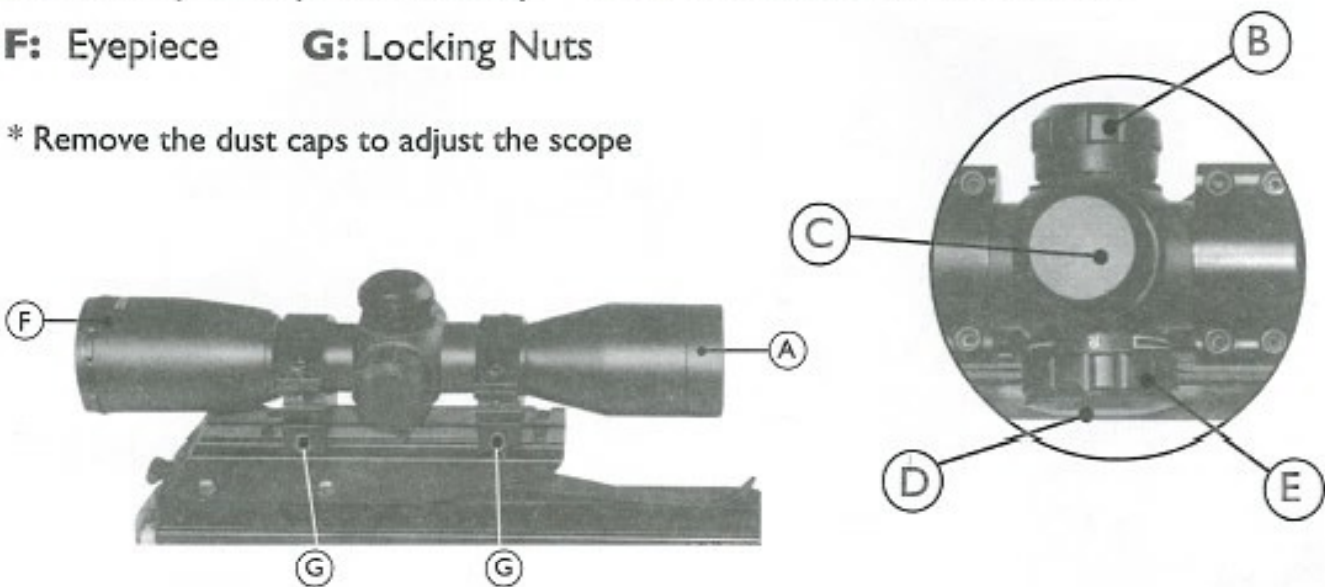

25. When you receive the crossbow, the Anti-dry fire switch is at " ON " and Safety catch is at " FIRE " position.

After cocking, the anti-dry fire switch will move from " ON " to " OFF", and the safety catch from " FIRE" to "SAFE" position.

After loading arrow, anti-dry fire switch will move from " OFF " to " ON" , and the safety catch will remain at " SAFE".

When you are ready to shoot, move the safety catch from SAFE to FIRE position and pull trigger. The bolt will fly out.

Please note " DO NOT AIM AT PEOPLE" or anything you are not intended to shoot.